



6500 Dobry Dr., Sterling Heights, MI 48314 U.S.A. Tel: 800-648-5778 Fax: 586-254-6509  
Web Site: [www.midwestinstrument.com](http://www.midwestinstrument.com) E-mail: [sales@midwestinstrument.com](mailto:sales@midwestinstrument.com)

## Quick Connect Test Cock Adapters



Designed for hand tight connection of Differential Pressure Test Gauges to Backflow Prevention Assemblies.

No Wrenches or Teflon Tape Required.

**Part No. 110631**

1/4" NPT Quick Connect x 1/4" Flare  
Includes 3 spare O-rings

**Part No. 110703**

1/2" NPT Quick Connect x 1/4" Flare  
Includes 3 spare O-rings

**Part No. 110704**

3/4" NPT Quick Connect x 1/4" Flare  
Includes 3 Spare O-Rings

## Quick Connect Test Cock Adapter Kit



**Part No. 110617**

(Set of 9)

Designed for hand tight connection of Differential Pressure Test Gauges to Backflow Prevention Assemblies.  
Set includes all fittings required to test any size Backflow device

**Set Includes:**

(3) 1/4" NPT X 1/4" Flare  
(3) 1/2" NPT X 1/4" FNPT  
(3) 3/4" NPT X 1/4" FNPT  
Includes 3 spare O-rings per size

## 90° Swivel Quick Connect Test Cock Adapters



**Part No. 110705**  
**(90° Swivel Fittings)**  
(Set of 3)

Rotate 360° after installation • Ideal for tight spaces

**Set Includes:**

(3) 1/4" NPT Quick Connect x 1/4" Flare 90° Swivel Fittings  
Includes 3 spare O-rings

## 90° Swivel Quick Connect Test Cock Adapter Kit



### Part No. 110706

(Set of 9)

Set includes all fittings required to test any size Backflow device.  
90° Elbow Swivel Fittings - Rotate 360° after installation.

Ideal for tight spaces.

#### Set Includes:

- (3) pieces 90° Swivel 1/4" NPT x 1/4" Flare Quick Connect Fittings
  - (3) pieces 1/2" NPT x 1/4" FNPT Quick Connect Fittings
  - (3) pieces 3/4" NPT x 1/4" FNPT Quick Connect Fittings
- Includes 3 spare O-rings per size

## 90° Swivel Quick Connect Kit for Male Test Cocks



### Part No. 111887

(Set of 3)

Designed for hand tight connection of Differential Pressure Test Gauges to Backflow Prevention Assemblies.

Ideal for tight spaces

- (3) pieces 1/4" NPT Quick Connect x 1/4" Flare

## Standard Test Cock Adapter Kit



### Part No. 109425

(Set of 9)


Standard NPT Adapter Fitting Kit

Fittings to connect Differential Pressure Test Gauges to Backflow Prevention Assemblies

#### Set includes:

- (3) 1/4" NPT X 1/4" Flare
  - (3) 1/2" NPT X 1/4" FNPT
  - (3) 3/4" NPT X 1/4" FNPT
- 2 Foot long chain to hang a test kit from the valve.

## Model 830 Replacement Hose Kit (Set of 3)

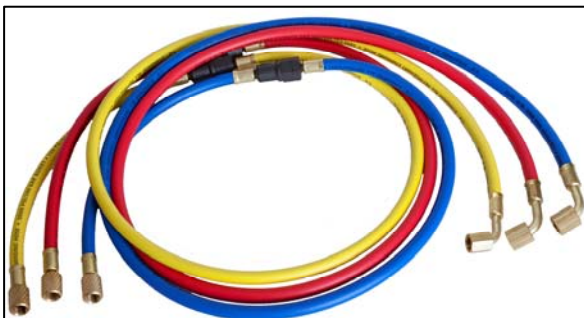


### Part No. 110645

Model 830 - Five Foot Replacement Hose Assembly Kit.  
Set of 3 - (Red, Blue, Yellow)

90 Deg. 1/4" Hex Flare and 1/4" Straight Quick Coupler.  
Field serviceable filter housing with filters included.

## Model 835/845 Replacement Hose Kit (Set of 3)

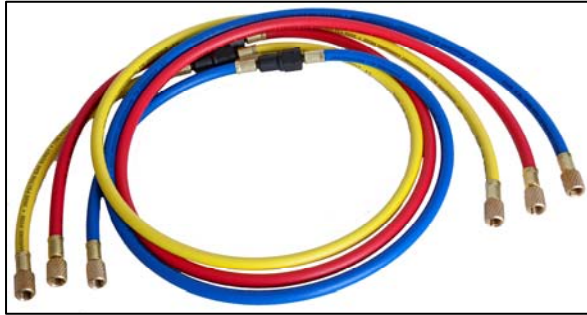

**Part No. 110646**

Model 835/845 - Five Foot Replacement Hose Assembly Kit. (Set of 3) - (Red, Blue, Yellow)

1/4" Straight Quick Coupler -Both Ends. Field serviceable filter housing with filters included.

## Filter Assembly Adapter Kit



**Part No. 109445**

Filter Assembly Adapter Kit-12" hoses. (Set of 3)

For Test Kit Hoses that do not have filters.

1/4" Quick coupler x 1/4" Flare Connection. Field Serviceable filter housing and filters included.


## Replacement Filter kit



**Part No. 98008**

Replacement Filter Element Kit (Set of 6)

## Vertical Tube Kit

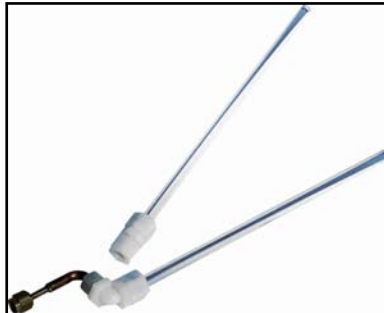

**Part No. 830-0003**

(For USC Test Procedures)

15" x 1/2" Dia. Tube/Test Cock Adapter Assembly.  
15" x 1/2" Dia. Extension Tube Assembly.  
15" Is Assembled Length.

## Bleed-Off Valve Assembly



**Part No. 830-0001**

(For USC Test Procedures)

Bleed-Off Valve Assembly  
Soft Seat Needle Valve

## Carrying Case



**Part No. 110405**

Test Kit Case with Foam (Accessories not included)

Represented By: